
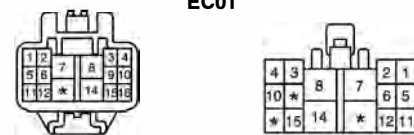




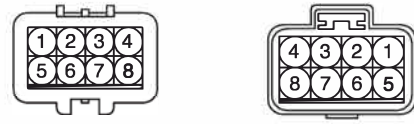

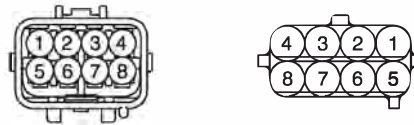


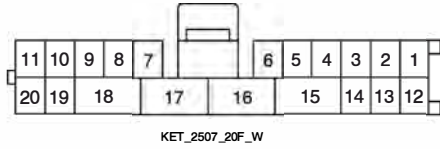


HARNESS CONNECTOR (1)		CC-1
<p>CC101</p>  <p>KUM_NMWP_04F_B CR04M011</p>	<p>EC01</p>  <p>KET_1809_16M_W KET_1809_16F_W</p>	
<p>EC02</p>  <p>KET_090II_14M_W KET_090II_14F_W</p>	<p>EC03</p>  <p>KUM_NMWP_08M_B KUM_NMWP_08F_B</p>	
<p>EC101</p>  <p>KET_1809_16M_W KET_1809_16F_W</p>	<p>EC102</p>  <p>KET_090II_14M_W KET_090II_14F_W</p>	
<p>EC103</p>  <p>KUM_NMWP_08M_B KUM_NMWP_08F_B</p>	<p>EE01</p>  <p>KUM_NMWP_03F_B CR03M024</p>	
<p>EE02</p>  <p>KET_090IWP_08M_W CR08F063</p>	<p>EE03</p>  <p>KUM_NMWP_01F_B CR01M002</p>	



HARNESS CONNECTOR

HARNESS CONNECTOR (2) CC-2



EM01

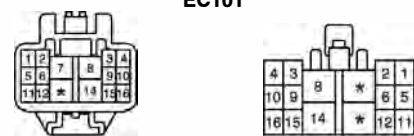



EM02

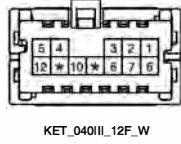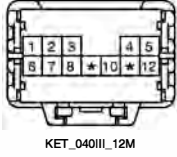



II01

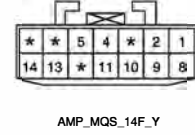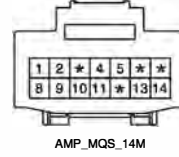


MC01

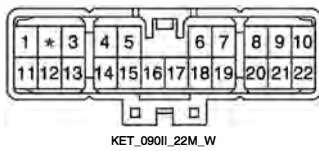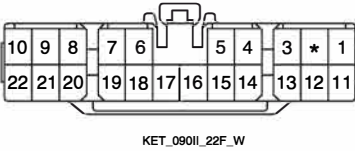



MC02

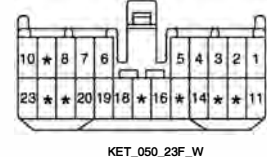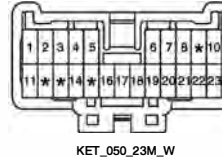



MC03

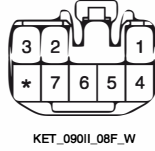



MC101

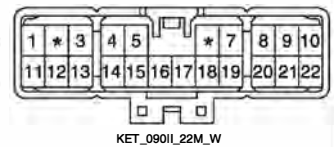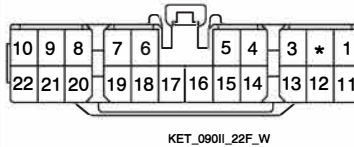

MC102

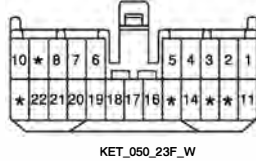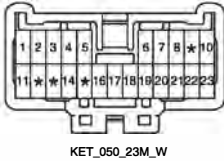


MC103

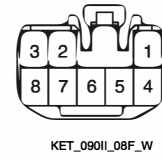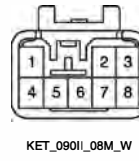














HARNESS CONNECTOR

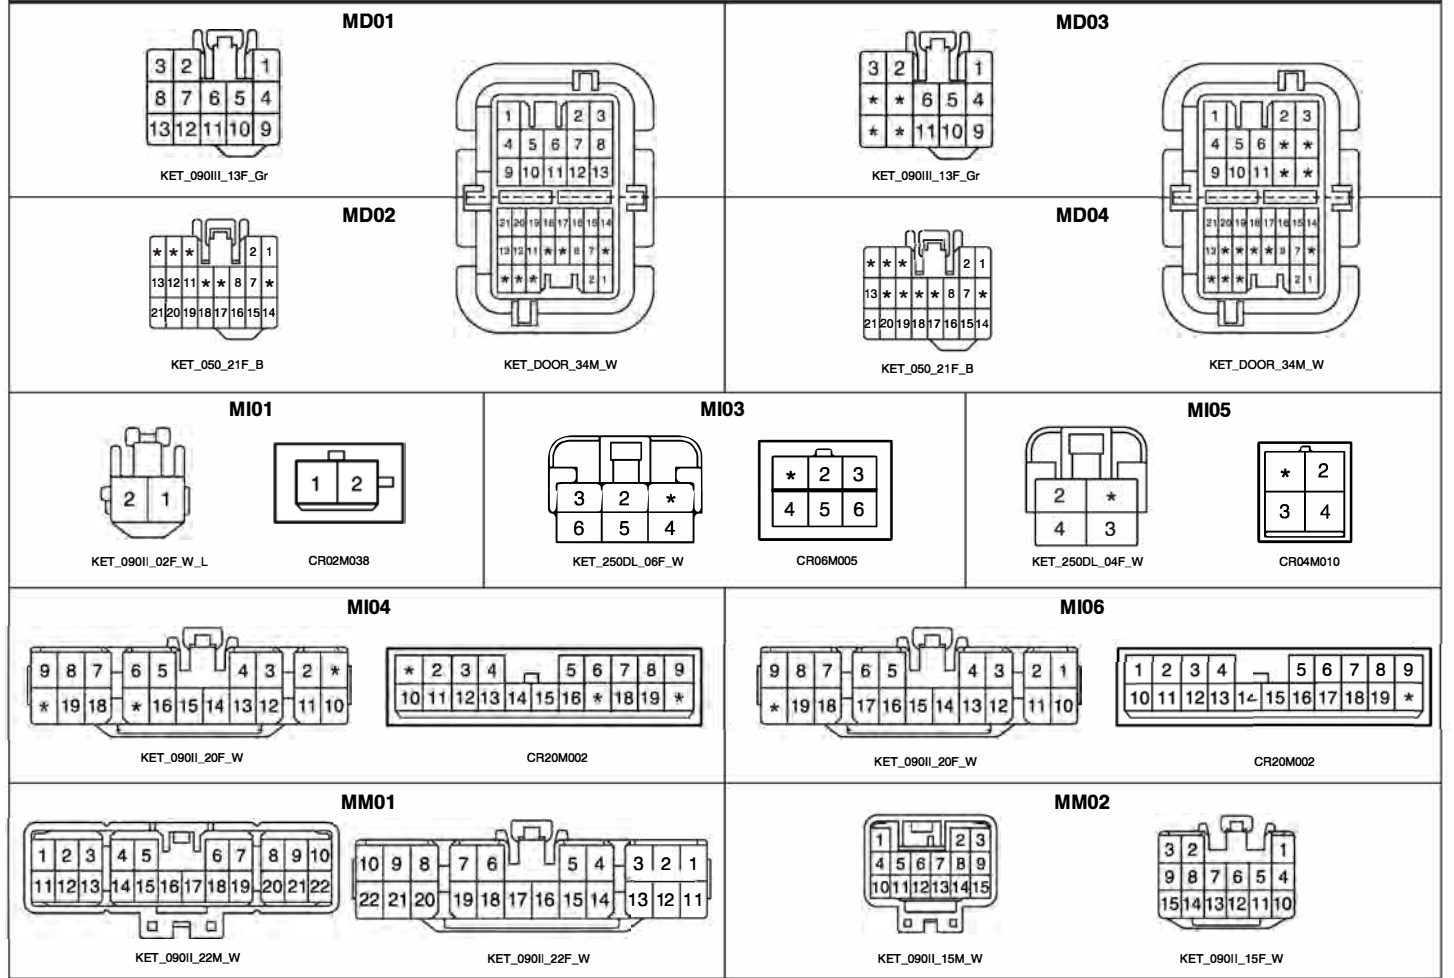HARNESS CONNECTOR (3) CC-3



HARNESS CONNECTOR

HARNESS CONNECTOR (4) CC-4

<p style="text-align: center;">MM03</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>KET_050_18M_L</p> </div> <div style="text-align: center;">  <p>KET_050_18F_W</p> </div> </div>	<p style="text-align: center;">MM06</p> <div style="text-align: center;">  <p>CR02B011</p> </div>	<p style="text-align: center;">BLANK</p>
<p style="text-align: center;">MM08</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>AMP_090III_14M_W</p> </div> <div style="text-align: center;">  <p>AMP_090III_14F_W</p> </div> </div>	<p style="text-align: center;">MR01</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>KUM_DSD_02M_W_CLIP</p> </div> <div style="text-align: center;">  <p>KUM_DSD_02F_W</p> </div> </div>	
<p style="text-align: center;">MR02</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>KUM_CDR_09M_W</p> </div> <div style="text-align: center;">  <p>KUM_CDR_09F_W</p> </div> </div>	<p style="text-align: center;">RR01</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>KET_250_02M_W</p> </div> <div style="text-align: center;">  <p>KET_250_02F_W</p> </div> </div>	
<p style="text-align: center;">RR02</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>KUM_CDR_09F_W</p> </div> <div style="text-align: center;">  <p>KUM_CDR_09M_W</p> </div> </div>	<p style="text-align: center;">BLANK</p>	

BCM CONNECTOR (1)		CC-5
<p>BCM-AI</p> <p>AMP_JPT_10F_B</p>	<p>BCM-CE</p> <p>AMP_JPT_18F_B</p>	<p>BCM-DE</p> <p>AMP_250DL_01F_B</p>
<p>BCM-EF</p> <p>AMP_040M2_12F_B</p>	<p>BCM-FF</p> <p>AMP_JPT_22F_B</p>	<p>BCM-GF</p> <p>AMP_SPT_02F_B</p>
<p>BCM-HM</p> <p>AMP_040M1_20F_B</p>	<p>BCM-IM</p> <p>AMP_040M2_20F_B</p>	<p>BCM-JM</p> <p>AMP_040M2_16F_B</p>
<p>BCM-KM</p> <p>AMP_JPT_14F_B</p>	<p>BCM-LM</p> <p>AMP_250_08F_W</p>	<p>BCM-MR</p> <p>AMP_JPT_08F_B</p>

